


Continue

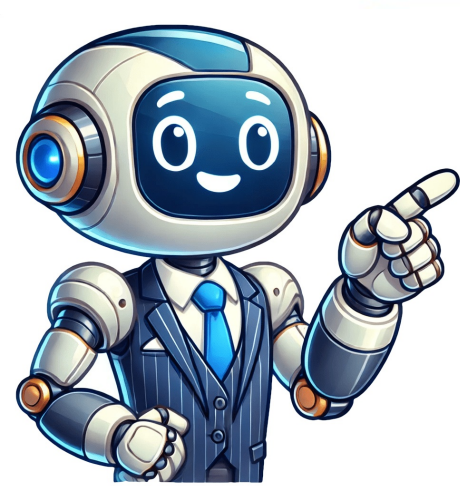























[illegible]

Press the mode key for the device (e.g., "TV", "DVD", "AUD", etc.). Step 2: Press and hold "SETUP" until the mode key blinks twice. Step 3: Enter "9" "9" "0". The LED will flash twice. Step 4: Press the "1" button. Wait 3 seconds and count the flashes. No flashes indicate this part of the code is a 0. Step 5: Repeat the previous step for the remaining digits. Press the "2" button for the second, "3" for the third and "4" for the fourth digit. Volume Lock (Atlas) Step 1: Press and hold "SETUP" until the mode key blinks twice. Step 2: Enter "9" "9" "3". The LED will flash twice. Step 3: To lock the volume control to the Cable Receiver: press and release the "CBL" button. To lock volume control to a Stereo System: press and release the "AUD" button. To lock volume control to the TV: press and release the "TV" button. The LED will flash twice. Cable mode Remote Lock (Atlas) Remote Lock can be used to ensure device codes are not accidentally changed. When unlocked, it is possible to change CBL to another setup code. If the remote does not accept the codes, the remote may be locked. To lock/unlock your remote, do the following: Step 1: Press the "CBL" button. Step 2: Hold the "SETUP" button until the "CBL" light blinks twice. Step 3: Enter "9 8 2". The "CBL" button will blink 2 times to indicate the remote is locked and 4 times to indicate the remote is unlocked. Channel Control Lock (Atlas) The default setting for the Channel Control lock is set so that in the Cable, TV and VCR modes, the remote will always operate the channel control for the cable box. To Activate/Deactivate Channel Control Lock, do the following: Step 1: Press the "CBL" button. Step 2: Hold the "SETUP" button until the "CBL" light blinks twice. Step 3: Enter "9 7 3". The LED will flash twice. Step 4: To activate Channel Control Lock: press and release the "CH+" button. To deactivate Channel Control Lock: press and release the "CH-" button. Power Macro (Atlas) There is the ability to program the Power button to turn on and off all of the equipment with the press of one button. This feature is designed to be mode specific, so that individual power is not lost in all modes. The Master Power ("PWR") button will only turn off all devices when the remote is in cable mode. Pressing the "PWR" button once will sequentially turn off the programmed devices. In any other mode, the individual device will turn off. When setting up a power macro, the macro must end with the cable mode. Ending with any other mode will render the macro inoperable. Programming the Power key for All ON/OFF (Atlas) Step 1: Press and hold the "SETUP" button until the LED flashes twice. Step 2: Enter "9" "9" "5". The LED will flash twice. Step 3: Press and release the "PWR" button (this tells the remote the Power button is being programmed). Step 4: Press and release the "TV" button. Press and release the "PWR" button. Step 5: Repeat the previous step for other devices to be programmed (e.g. "DVD", "AUD", etc.). Step 6: Press and release the "CBL" button. Press and release the "PWR" button. Step 7: Press and hold the "SETUP" button until the LED flashes twice. Removing the Power Macro (Atlas) Step 1: From the cable mode, press and hold the "SETUP" button until the LED flashes twice. Step 2: Enter "9" "9" "5". The LED will flash twice. Step 3: Press the "PWR" button. Step 4: Press and hold the "SETUP" button until the LED flashes twice. Reassigning a Device Button (Atlas) This feature allows a device button to be assigned to different device (e.g., making the "DVD" button a secondary "TV" button). Step 1: Press and hold the "SETUP" button until the LED flashes twice. Step 2: Enter "9" "9" "2". The LED will flash twice. Step 3: Press and release the device button to be duplicated (e.g., "TV"). Step 4: Press and release the destination device button to be replaced (e.g., DVD). Step 1: Press and hold the "SETUP" button until the LED blinks twice. Step 2: Enter a 4-digit code. Step 3: Test the "TV Power", "VOL+/-" and "MUTE" buttons. If all work, setup is complete. If not, repeat this process using a different code. Pulse Remote Buttons (img) Manual code search (Pulse IR & RF) Step 1: Turn on your TV. Step 2: Press and hold the "SETUP" button until the LED blinks twice. Step 3: While pointing the remote at the TV, press and hold the "OK/ENTER" button until the TV turns off. Step 4: Test the "TV Power", "VOL+/-" and "MUTE" buttons. If all work, setup is complete. Quick code search - by popular brands (Pulse IR & RF) TV brandDigit Insignia/Dynex1 LG/Zenith2 Mitsubishi3 Panasonic4 Philips/Magnavox5 Samsung6 Sharp7 Sony8 Toshiba9 Vizio0 Step 1: Turn on your TV. Step 2: Press and hold the "SETUP" button until the LED blinks twice. Step 3: Press the "TV Power" button. The LED remains on. Step 4: While pointing the remote at the TV, press and hold the digit key for your TV's brand until the TV turns off. Step 5: Test the "TV Power", "VOL+/-" and "MUTE" buttons. If all work, setup is complete. Volume Lock (Pulse IR & RF) Step 1: Press and hold the "SETUP" button until the LED blinks twice. Step 2: To set volume control for the TV: press "VOL+". The LED will blink twice. To set volume control for the DTA: press "MUTE". The LED will blink 4 times. RF Pairing (Pulse RF) Step 1: Press and hold the "SETUP" button until the LED blinks twice. Step 2: Press the "MENU" button on the remote. The remote will begin blinking as it attempts to pair. Step 3: Refer to the STB or RF adapter's instructions to complete pairing. Step 1: Press and hold "SET" until the red LED blinks twice. Step 2: Enter a 5-digit code for your TV. The LED will blink twice. (If you enter an invalid code, the LED will display one long blink and exit the programming mode.) Step 3: Aim the remote control at your TV and press "POWER" once. The device should turn off. If it does not respond, repeat steps 1 & 2, trying each code listed for your brand until you find one that works. Suddenlink Delta URC3068 Remote Buttons (img) Manual code search (Suddenlink Delta) Step 1: Turn on your TV. Step 2: Press and hold "SET" until the LED blinks twice. Step 3: Enter in "9" "9" "1". The LED will blink twice. Step 4: While pointing the remote control at the TV, press and release the "CH+" key until the TV turns off. (Note: You may need to press "CH+" numerous times). Step 5: Press "SET" once to lock in the code. The LED will blink twice. Code Retrieval (Suddenlink Delta) Finding out the actual code after the 'Manual code search' procedure will save you a lot of time if you ever need to program the remote again. Follow the steps below to find out which code is used to control your device: Step 1: Press and hold "SET" until the LED blinks twice. Step 2: Enter in "9" "9" "0". The LED will blink twice. Step 3: To view the code for the first digit, press "1" once. Wait 3 seconds and count the number of times the LED blinks (e.g., 3 blinks = 3). If a code digit is "0" the LED will not blink. Step 4: Repeat the previous step four more times for the remaining digits. Use "2" for the second digit, "3" for the third digit, "4" for the fourth digit and "5" for the fifth digit. Volume Lock (Suddenlink Delta) The Suddenlink Delta remote is set to control the volume level of the Digital Adapter. Once a valid TV code is programmed, the volume keys will operate the volume of the TV. However, you may change the Volume Lock setting to regain volume control of the Digital Adapter as follows: Step 1: Press and hold "SET" until the LED blinks twice. Step 2: Enter in "9" "9" "3". The LED will blink twice. Step 3: Press and release the digit "1" to change volume lock from TV to the Digital Adapter (or digit "2" to change volume lock from Digital Adapter to the TV). The LED will blink 4 times.